



## 1-WIDE SLOPE TOP KIT

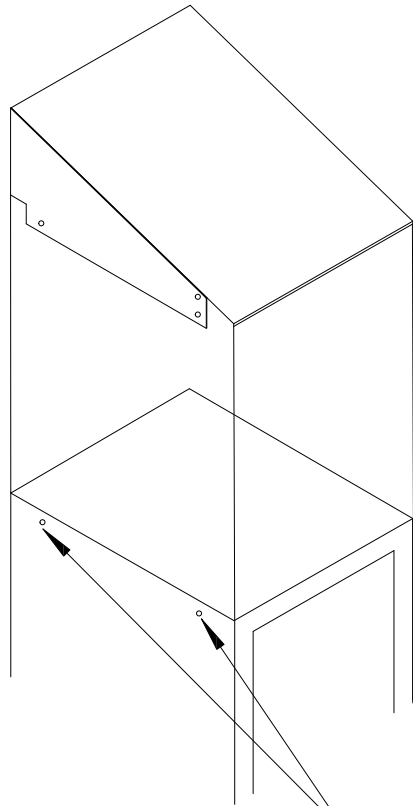

## 3-WIDE SLOPE TOP KIT

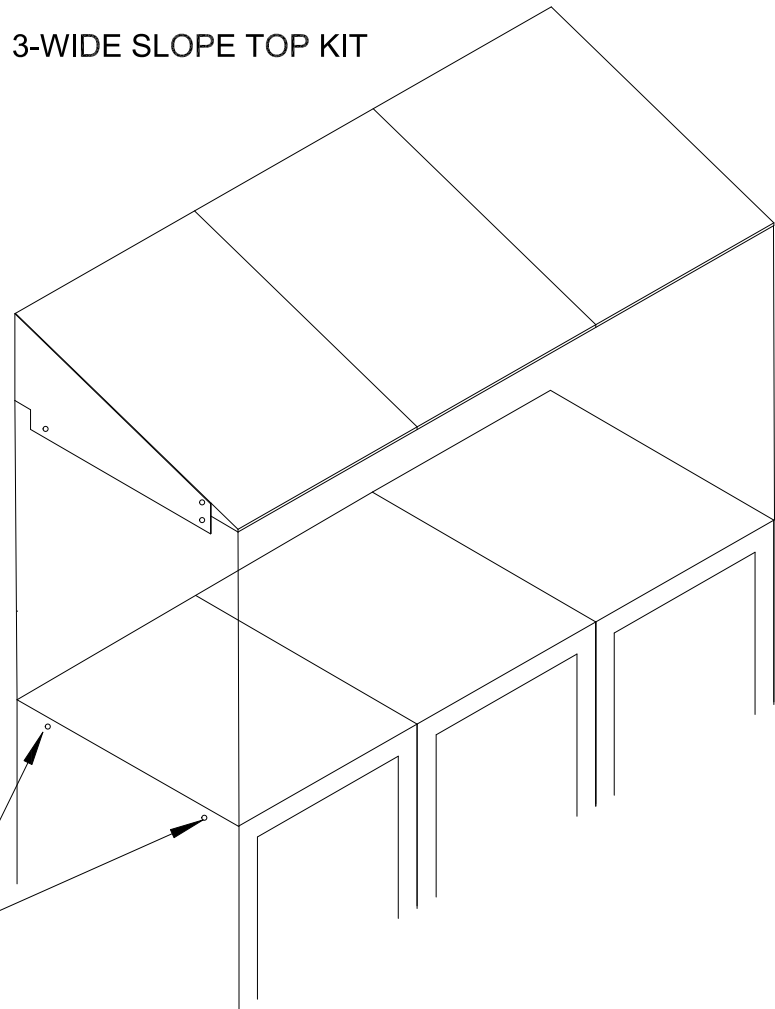

Remove  
bolts

- Lay tops upside-down, arranged in same grouping as lockers (i.e. 1,2,or 3-wide)
- Bolt tops together
- Bolt universal sides on both ends of slope top
- Remove bolts or rivets connecting side panel of locker to top of locker
- Place assembled slope top on top of locker grouping, with slope top sides tucked between locker sides and locker tops
- Re-install bolts
- Install self-tapping screws through inside top of door frame into underside of leading edge of slope top (1 per frame)